

HYDRA-HINGE

Operating, Maintenance and Warranty Instructions

WARRANTY (Please also refer to our detailed terms and conditions of sale)

1 year warranty on all parts for fair wear and tear, the sheet also carries a 1 Year Warranty. Warranty does not cover Straps (For warranty on parts of the system please call 01945 461741 or [CLICK HERE](#)).

Return faulty part to Dawbarn & Sons for inspection and warranty claim (A replacement will be sent within 24 hours).

ALL PARTS WILL BE SUPPLIED FOC IF THEY HAVE FAILED UNDER WARRANTY PERIOD WITH FAIR WEAR & TEAR

Do not alter factory prepared settings on Powerpack.

Do not attempt to repair or take apart motors or Powerpack as this may invalidate your warranty. PARTS MUST ONLY BE REPLACED WITH ITEMS SOLD AND APPROVED BY DAWBARN & SONS Ltd.

If you have any questions, please call 01945 461 741 or [CLICK HERE](#) for more information on this system.

- **TO OPEN SHEET** Press both open switches on system control panel/remote control until both nets have fully come over down the sides of the body. [CLICK HERE FOR VIDEO](#)
- **TO CLOSE SHEET** Press both close switches on system control panel/remote control until both nets have fully come over on each other on top of the body. [CLICK HERE FOR VIDEO](#)



IMPORTANT

- ALWAYS open nets, where possible, before tipping to avoid the risk of a vacuum forming and damage occurring.
- DO NOT open or close nets while vehicle is moving or in high winds.
- DO NOT operate system while tipping.
- DO NOT travel with the nets in the open position.
- DO NOT operate system if the load is above height of the nets.
- WHEN WELDING BODYWORK the remote control receiver plug must be disconnected from the hydraulic powerpack.

MAINTENANCE

- Inspect nets DAILY, for wear or damage and repair or replace if required.
- Check oil level MONTHLY, which should be 50mm below filler point DO NOT OVERFILL.
- Change oil every 12 MONTHS, Oil type MILLERS OILS MILLMAX 46 HFD (U).
- Check all hose connections and fittings, for tension and leaks.

TROUBLE SHOOTING

If the system is not operating correctly:

- Check fuse in the Powerpack and the 150 amp fuse in the Battery Box.
- Check for obstructions on top of the body stopping the system operating.
- Check that there is no damage to the arms or hinges.
- Check that the oil level is correct.



Dawbarn & Sons Ltd · Harecroft Road · Wisbech · Cambridgeshire · PE13 1RL · UK
Tel +44 (0)1945 461741 · Email: sales@dawbarn-evertaut.co.uk · Website: dawbarn-evertaut.com ·

