

# WRAPTOR<sup>2</sup>

## Operating, Maintenance and Warranty Instructions

**WARRANTY** (Please also refer to our detailed terms and conditions of sale)

3 Years Warranty on all parts for fair wear and tear, excluding the sheet which carries a 1 Year Warranty (For warranty on parts of the system please call 01945 461741 or [CLICK HERE](#)).

Return faulty part to Dawbarn & Sons for inspection and warranty claim (A replacement will be sent within 24 hours).

ALL PARTS WILL BE SUPPLIED FOC IF THEY HAVE FAILED UNDER WARRANTY PERIOD WITH FAIR WEAR & TEAR.

Do not alter factory prepared settings on Powerpack.

Do not attempt to repair or take apart motors or Powerpack as this may invalidate your warranty.

PARTS MUST ONLY BE REPLACED WITH ITEMS SOLD AND APPROVED BY DAWBARN & SONS Ltd.

If you have any questions please call 01945 461 741 or [CLICK HERE](#) for more information on this system.

- **TO OPEN SHEET** Press open switch on sheeting system control panel/remote control until sheet has fully rolled over body to fixed side and is situated on top rail of vehicle. [CLICK HERE FOR VIDEO](#)
- **TO CLOSE SHEET** Press close switch on sheeting system control panel/remote control until sheet has fully rolled back over body to open side. To lock down sheet hold button down for a further 4 seconds after closing. [CLICK HERE FOR VIDEO](#)



### IMPORTANT

- ALWAYS open sheet, where possible, before tipping to avoid the risk of a vacuum forming and centre pole being bent.
- DO NOT open or close sheet while vehicle is moving or in high winds.
- DO NOT operate system while tipping.
- DO NOT travel with the sheet in the open position.
- DO NOT operate system if load is above the height of front and rear domes.

### MAINTENANCE

- Inspect sheet DAILY, for wear or damage and repair or replace if required.
- Check oil level MONTHLY, which should be 50mm below filler point. DO NOT OVERFILL
- Change oil every 24 MONTHS, Oil type MILLERS OILS MILLMAX 46 HFD (U).
- Check all hose connections and fittings, for tension and leaks.

### TROUBLE SHOOTING

If the system is not operating correctly:

- Check fuse in the Powerpack and the 150 amp fuse in the Battery Box.
- Check for obstructions on top of the body stopping the sheeting system operating.
- Check that there is no damage to the centre and side poles.
- Check that the oil level is correct.



Dawbarn & Sons Ltd · Harecroft Road · Wisbech · Cambridgeshire · PE13 1RL · UK  
Tel +44 (0)1945 461741 · Email: [sales@dawbarn-evertaut.co.uk](mailto:sales@dawbarn-evertaut.co.uk) · Website: [dawbarn-evertaut.com](http://dawbarn-evertaut.com) ·

